




User Instructions  
23500-II Knobless Click!t Arm

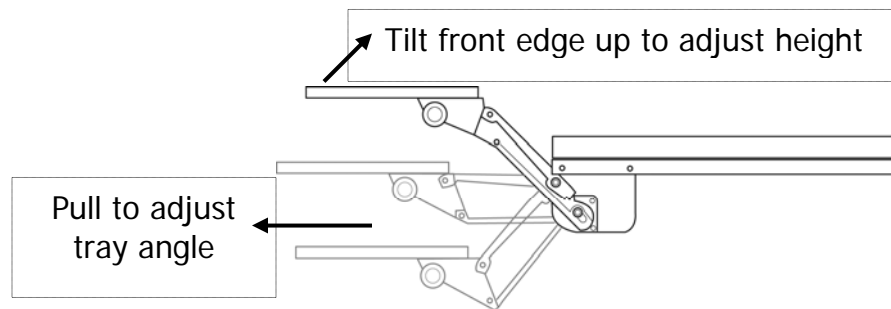

Position hands at right and left edges of tray:

**Height** – tilt front edge of tray up approximately 1" to release lock, raise or lower tray to desired position, release tray to engage lock

**Tilt** – with arm against front track bumper, pull tray directly towards you approximately ¼" to release lock, raise or lower front edge of tray to desired angle, release tray to engage lock

For further questions, please call Grand Stands, Inc. at 1-800-831-2150