




Instructions For Mounting 21450-S AND 21450-ST Swivel Mouse Attachment

1. Mark holes with template (see below). Align with the edge of platform as shown.
2. Use 4 1/2" screws (included).
3. Place mouse on tray with cord running between rear holes. Attach wire mouse guard to rear of tray by pushing into pre-drilled holes.
4. Adjust mouse tray to desired mousing position.

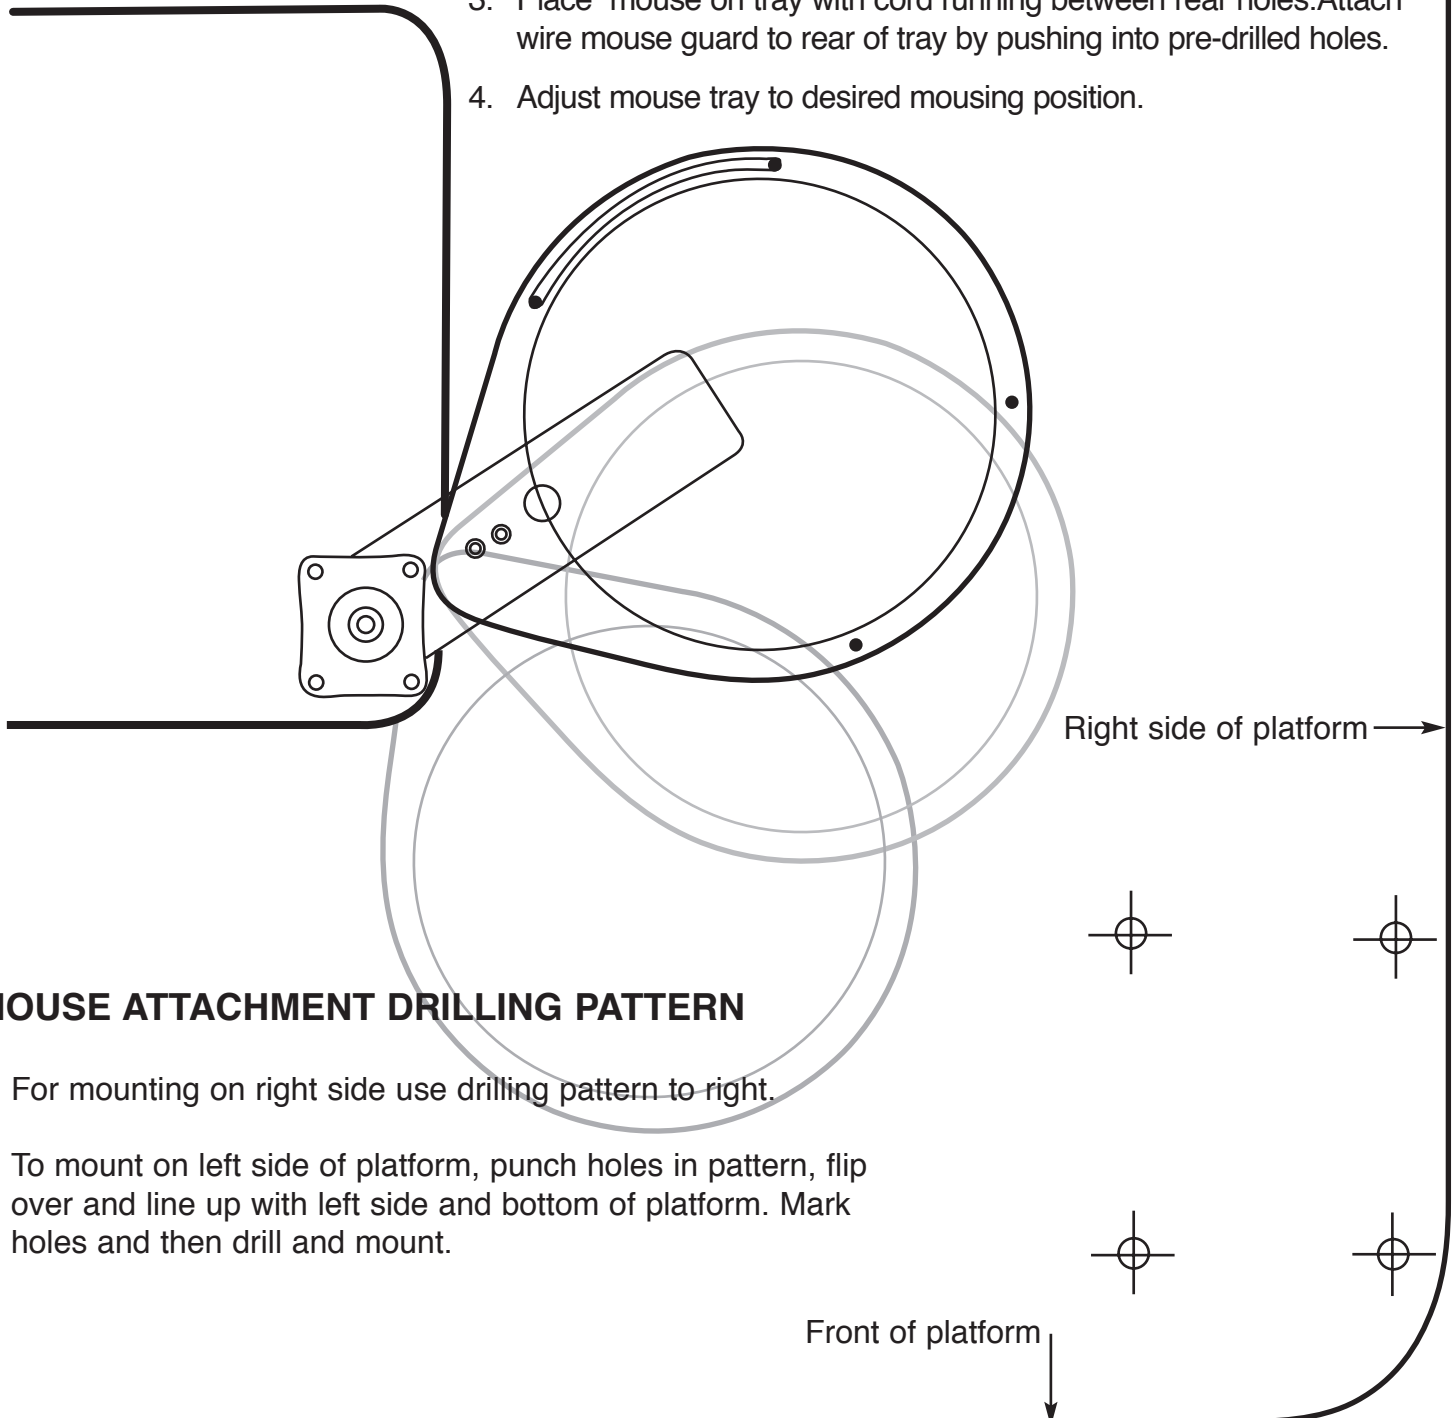

MOUSE ATTACHMENT DRILLING PATTERN

1. For mounting on right side use drilling pattern to right.
2. To mount on left side of platform, punch holes in pattern, flip over and line up with left side and bottom of platform. Mark holes and then drill and mount.