


## UPRIGHT BRACKET MOUNTING ORIENTATIONS


Both the "TS" L-Bracket and "UB" L-Bracket are designed to provide installation options.

They can be mounted with the post either above the bracket (standard mount) or the bracket is turned over and the post mounts to the inside of the bracket (low profile).

The standard mount has easier access but a bigger footprint.

The low profile mount is compact for limited space uprights but the post has to be removed to access the mounting hardware.

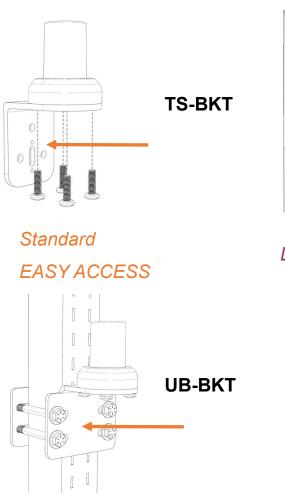

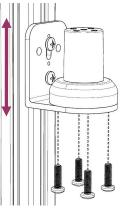

LOW PROFILE

